



burtonsafes.co.uk



**BURTON
SAFES**

LOCKING INSTRUCTIONS

FF Cabinet

**UK
CA** **CE**

LOCKING INSTRUCTIONS

FF Cabinet

ABOUT THE LOCK

This lock requires a 6-8 digit code to open the lock. You can have 2 different codes on this lock- the master code and the secondary code. This lock can have a time delay and open window activated. The time delay can be 1-99 minutes long and the open window can be 1-9 minutes long.

How to open the safe

- Press the [ON] key
- Enter a valid 6-8 digit code (the factory default is '123456')
- Press the [#] key
- Press the button next to the keypad to release the lock
- Open the drawer within 5 seconds

How to close the safe

- Close the drawer and press the button next to the keypad

Changing the master code

- Press the [#] key
- Press key [1] followed by the [#] key
- Enter the existing 6-8 digit master code
- Press the [#] key
- Enter a new 6-8 digit code followed by the [#] key
- Re-enter the new 6-8 digit code, then press the [#] key to confirm

Activating the secondary code

(Using the master code)

- Press the [ON] key
- Press the [#] key
- Press key [2] followed by the [#] key
- Enter the 6-8 digit master code followed by the [#] key
- Enter a 6-8 digit code for the secondary code
- Press the [#] key
- Enter the 6-8 digit secondary code again followed by the [#] key to confirm

Deleting the secondary code

- Press the [ON] key
- Press the [#] key
- Press key [0] followed by the [#] key
- Enter the 6-8 digit master code followed by the [#] key

Changing the secondary code

- Press the [ON] key
- Press the [#] key
- Press key [3] followed by the [#] key
- Enter the 6-8 digit secondary code followed by the [#] key
- Enter a new 6-8 digit code for the secondary code
- Press the [#] key
- Re-enter the new 6-8 digit code followed by the [#] key to confirm

Turning the keypad sound on/off

- Press the [ON] key
- Press the [#] key
- Press key [5] followed by the [#] key
- Enter the 6-8 digit master code followed by the [#] key

Programming the time delay and open window

A time delay is the time you have to wait in between the entry of your code and the opening of your safe. An open window is the amount of time you have to open your safe. For example, if you wanted a 30 minute time delay and a 5 minute open window, this would mean that once you have entered a valid 6-8 digit code, you have to wait 30 minutes before you can open the safe door. After 30 minutes, you will have 5 minutes to open the safe door. If you wait longer than 5 minutes, you have to start the process again.

- i. Press the [ON] key
 - ii. Press the [#] key
- Enter the 6-8 digit master code followed by the [#] key
 - Now enter the desired time delay and open window length, i.e. for a 30 minute time delay and 5 minute open window, enter 305.

Deleting the time delay and open window

- Press the [ON] key
- Press the [#] key
- Press key [6] followed by the [#] key
- Enter the 6-8 digit master code followed by the [#] key
- Enter [0][0][0]. The time delay is now deleted

Opening the safe with time delay and open window

- Press the [ON] key
- Enter a valid 6-8 digit code
- The time delay has started. A red LED flash and acoustic signal will happen every 5 seconds
- When the time delay is over the open window will begin. During the open window, a green LED will flash with an acoustic signal every 5 seconds
- During the open window, re-enter a valid 6-8 digit code and push the button to release the lock
- Open the drawer within 5 seconds

Current supply / battery change

Low power is shown by the red LED flashing and a quintuple acoustic signal. The battery cover is located at the bottom of the lock. Remove the battery cover and carefully take out the battery. Unclip the wire and replace the battery. Take care when changing batteries to ensure that no cables are damaged.

NOTE: You can not change your code while the lock has low power. However you can still open the lock